MACHENIKE

M-GAME

MACHENIKE GAMEPAD

G6 V2

USER MANUAL 使用说明书


WARRANTY CARD 保修卡

Read manual before use. Keep for reference


使用本产品前请仔细阅读说明书，妥善保存以备参考

PACKING CONTENTS


Please check and confirm the accessories

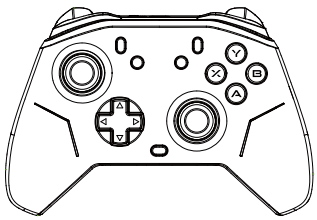

1 x Controller

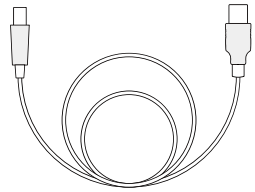


1 x USB Data Cable

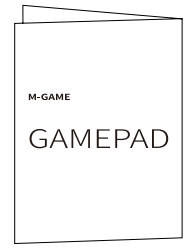


1 x User Manual, Certificate Of Compliance



1 x Joystick Torque Tab





1 x Receiver

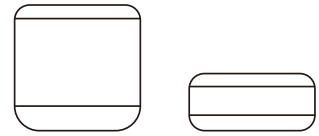


2×High-Rise Silicone Joystick Caps
2×Low-Rise Silicone Joystick Caps

BUTTON LAYOUT

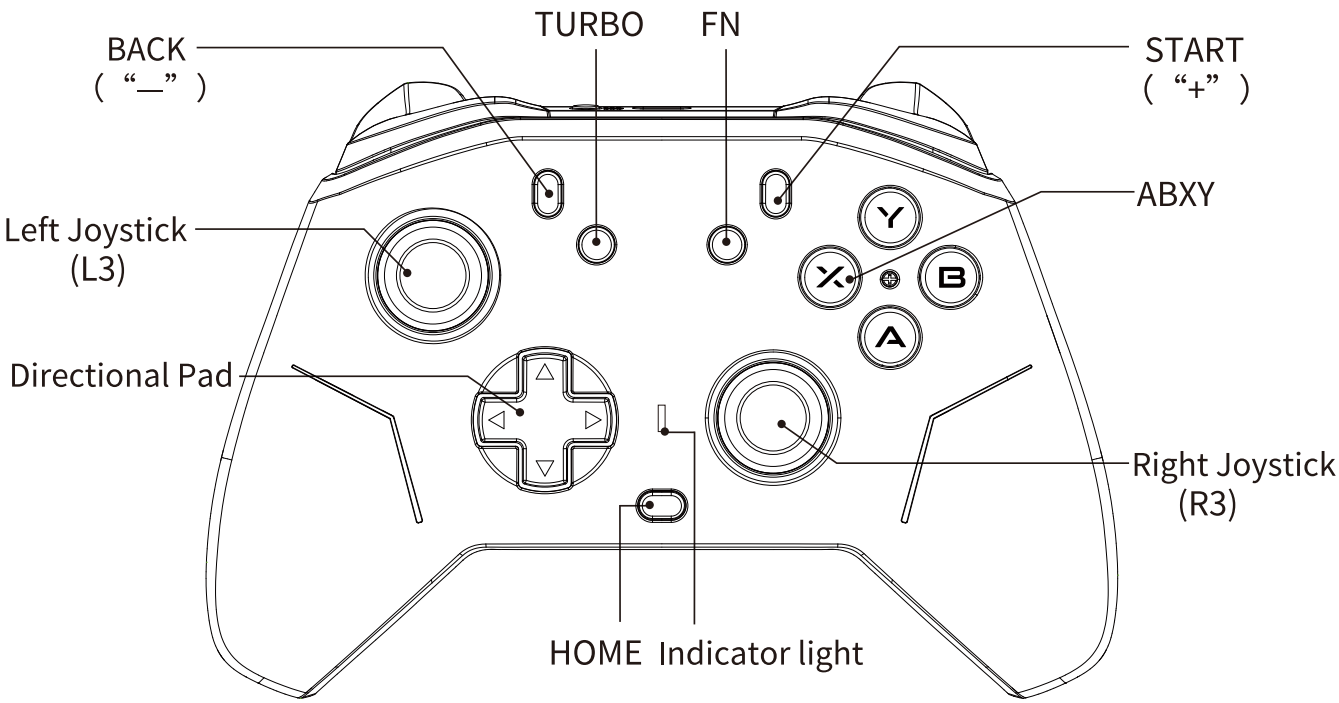

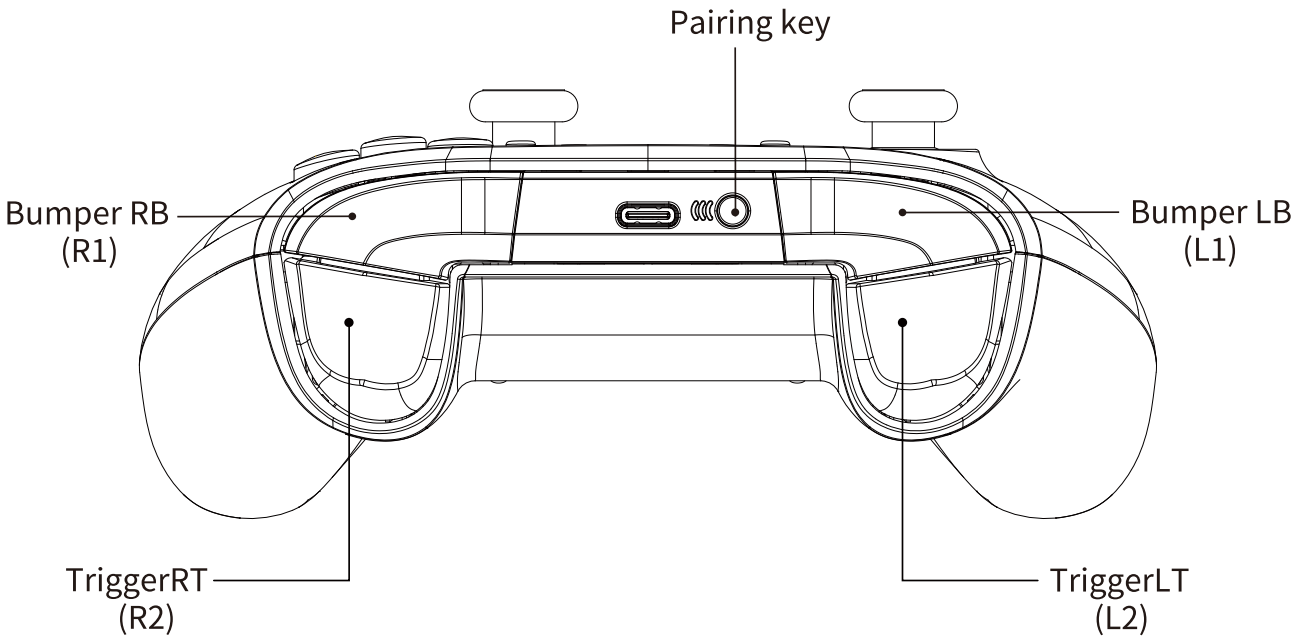
Pairing key
Bumper RB
(R1)
Bumper LB
(L1)
TriggerRT
(R2)
TriggerLT
(L2)

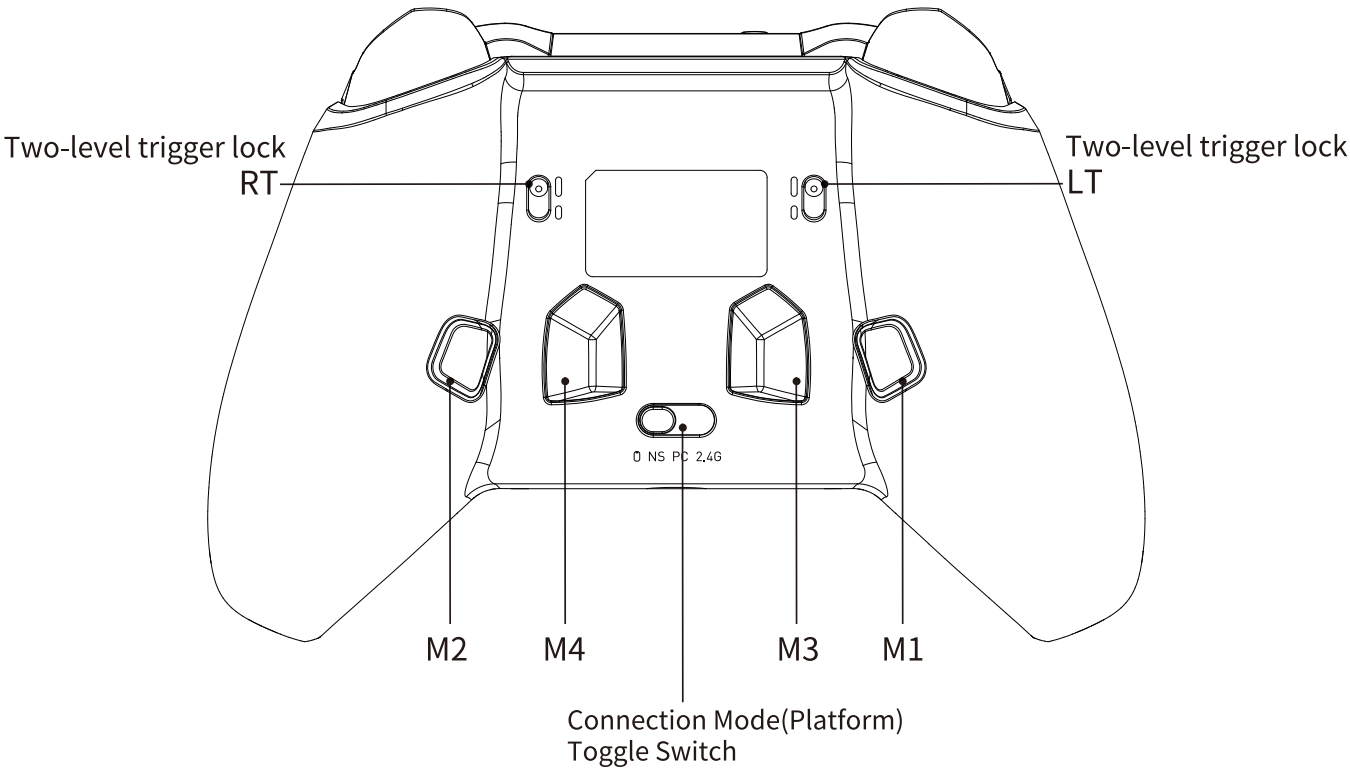
Two-level trigger lock
RT
Two-level trigger lock
LT
NS PC 2.4G
M2
M4
M3
M1
Connection Mode(Platform)
Toggle Switch

CONNECTION

Before establishing a wireless connection, please ensure to switch to wireless mode using the combination keys.

RECEIVER Mode —— Device name: Automatically matches receiver connected device;
PC Mode —— Device Name: Xbox Wireless Controller;
NS Mode —— Device Name: Pro Controller;
Mobile Mode —— Device Name:G6V2_Touch

Wireless Connection： After switching to the corresponding gear, press and hold the pairing button until the indicator light flashes quickly, and the controller enters the pairing state, and connects to the corresponding device name above.

Wired Connection： After the mode is switched to the corresponding gear, directly connect the device and the controller through the included data cable for use.

Controller Sleep/Reconnect: In wireless mode (Bluetooth/Receiver), if there's no activity for 10 minutes, the controller will automatically power off. Press the HOME button to wake up the controller, and it will automatically reconnect to the previous device.

Turn off the controller: When using wireless connection (Bluetooth/Receiver), press and hold the HOME button for more than 5 seconds to shut down the controller.

BATTERY INFORMATION

- **Battery indicator**

Battery status	Battery indicator
• 20%——100%	• Ice blue indicator light stays on
• 10%——20%	• Red indicator light stays on
• Less than10%	• Red indicator light flashes

Charging status	Battery indicator
• 0%——20%	• Red indicator light flash
• 20%——100%	• Ice blue indicator light flash
• Fully charged	• Ice blue indicator light stays on

Note: During pairing and some function adjustments, the channel indicator lights w -ill temporarily serve as function indicators and return to battery level display after a -bout 3 seconds. When using a wired connection, the channel indicator lights displa -y real-time charging status, while in wireless mode, they display real-time battery level.

Attention! Don't use a power source exceeding 5V 1A to charge th -e controller, to avoid causing damage to the device.

COMBINATION BUTTONS

FUNCTION	COMBINATION BUTTONS	INDICATOR LIGHTS /NOTES
Light Brightness Adjustment	[FN] + D-pad [←]	/
Light Mode Adjustment	[FN] + D-pad [→]	/
Vibration Intensity Adjustment	[FN] + D-pad [↑]/[↓]	/
Screenshot	Press [FN]	Only for Switch
Joystick Dead Zone Switch	[L3] + [R3] simultaneously pressed for 5s	Successful switch confirmation with vibration
Motion-Sensing Controls	Press [FN] + [L3] to map motion controls to the left joystick. Press [FN] + [R3] to map motion controls to the left joystick.	Successful switch confirmation with vibration

Controller Mode Switch （Xinput/Dinput/Switch）	Holding the [BACK] + [START] buttons for 3 seconds.	Only for Receiver Mode
Joystick Circular Area Adju -stment Switch	Left joystick: [FN]+ joystick[↑]/[↓] Right joystick: [FN]+ joystick[↑]/[↓]	**Left joystick:**The dec-orative lights indicate from left to right **Right joystick:**The de-corative lights indicat-e from left to right

*When using combination keys, it is essential to follow the specified button sequen -ce mentioned above; otherwise, switching may not work correctly.

ADVANCED FUNCTIONALITY

Programming Buttons Macros:

• Controller Operation:

1, With the controller already connected, simultaneously press the FN key + M1/ M2/M3/M4 key. The decorative light strip will continuously flash, indicating that you've entered the recording mode. If it doesn't flash, please repeat this opera-tion.

2, Sequentially input the function keys you want to set.

3, After setting is complete, briefly press the corresponding macro key (M1/M2/M3 /M4). The decorative light strip backlight will stop flashing and return to the previ-ous mode, indicating that the configuration is complete.

Note: Clearing the current M1 macro definition:

While the controller is in working status, simultaneously press FN + M1. The dec -orative light strip will continuously flash, and then press the M1 key once more. The decorative light strip will stop flashing, clearing the current custom function. The same steps apply to clearing other macro keys.

TURBO Function:

Supported TURBO buttons: A/B/X/Y/LB/LT/RB/RT

Manual TURBO Function: When the manual TURBO function is enabled for the A button, you need to manually hold down the A button to activate it.

To enable the TURBO function:

1, Press and hold TURBO+A and then release it. At this point, the A button activates the manual continuous fire function.

2, Press TURBO+A again. Now, the A button activates the automatic continuous fire function.

3, Press TURBO+A once more to disable the continuous fire function.

Note: TURBO+A/B/X/Y/LB/LT/RB/RT can be used to enable the TURBO function for the corresponding buttons. When buttons are in continuous fire mode, the indicator light will flash in synchronization.

***Clear All TURBO Functions:**Press and hold the TURBO button for 5 seconds until the controller vibrates once, indicating successful reset.

APP Download for Android/HarmonyOS/iOS:

1, Download the app and related firmware updates from the Machenike official website: https://global.machenike.com/

2, Or scan the QR code on the right using your browser to access the download page.

3, For HarmonyOS, please download the Android version of the app.

Connection Steps:

1, After correctly installing the Keylinker software on your phone, confirm the relevant permissions prompts that a-ppear when you first start the app.

2, Start the controller in any mode, and you can find "G6V2_APP" on the Keylinker app's main page.

3, Click "G6V2_APP" to connect and enter the customization interface.

Note: *This function does not require the controller to connect to the mobile phone via Bluetooth. Follow the above operations to open Keylinker to change the controller settings.

Note: Harmony 5.0 and above do not support Keylinker

RESET

When the controller is unresponsive or unable to identify the working mode during operation or access, you can pull out the USB cable of th -e controller and reconnect it, or use the manual mode to select into t -he corresponding working mode. If the problem still can not be solve -d, please long press the [HOME] button for 10 seconds or check the compatibility of the operating system and equipment with the contro ller, if still can not be solved, please contact the dealer customer servi -ce.

Copyright Information

PlayStation is a registered trademark of Sony Interac tive Entertainment (SIE).
XBOX/Windows is a registered trademark of Mirosof Corporation.
Android is a trademark of Google lnc.
Nintendo Switch is a registered trademark of Nintendo Co.
Macos is a registered trademark of Apple Inc. in the Un -ited States or other countries.
Other system and product names that appear in this do -cument are generally registered trademarks or tradem -arks of the respective developer companies. Please no -te that the ™logo and ® logos do not appear in this doc -ument.

Please consult customer service or the brand's website for updates to the product firmware without notice.

Machenike Official Website: https://global.machenike.com/

SPECIFICATIONS

ITEM	DATA
Input Power	5.0V ⎓ 500mA
Battery Capacity	3.7V /1200mAh
Use Distance Range	⩽ 10M


BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.


CAUTION:
Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

产品清单

请检查并确认附件

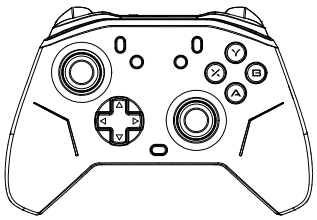

1 x 手柄

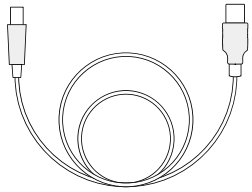


1 x USB充电数据线




1 x 使用说明书、保修卡、合格证



1 x摇杆调节片





1 x 接收器

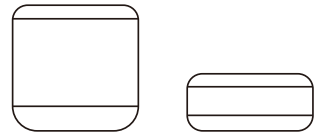


2×高硅胶摇杆帽，2×低硅胶摇杆帽

按键布局

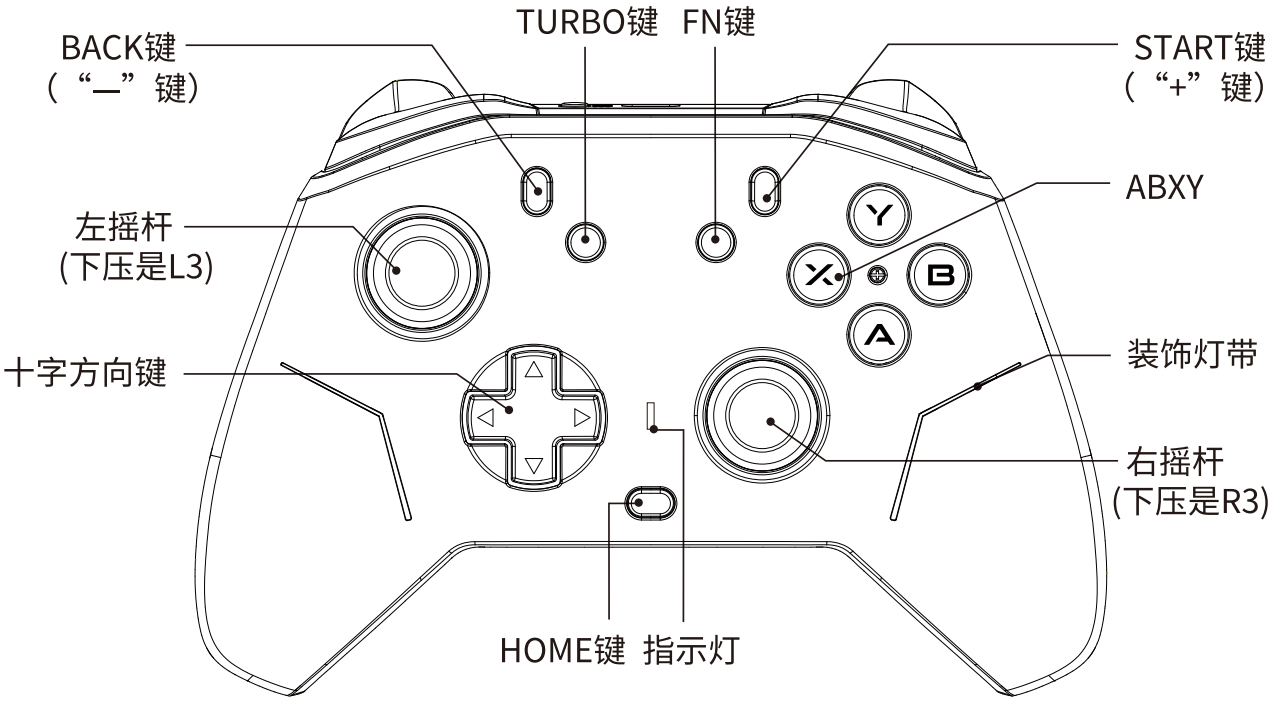

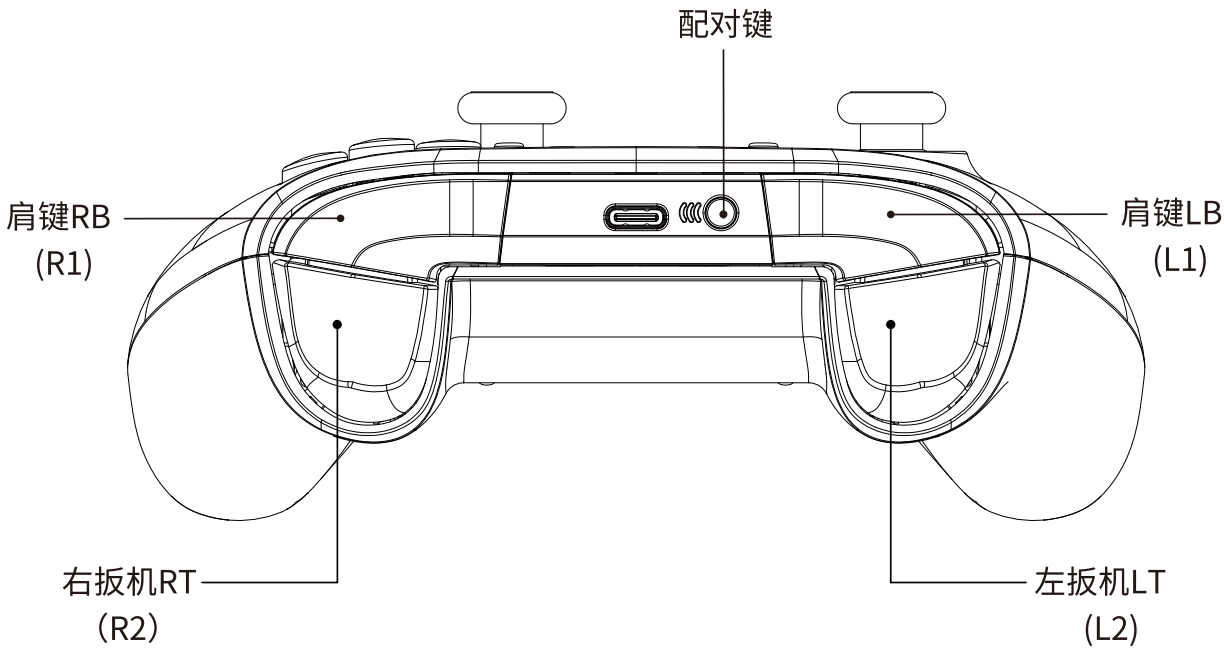
配对键
肩键RB
(R1)
肩键LB
(L1)
右扳机RT
（R2）
左扳机LT
(L2)

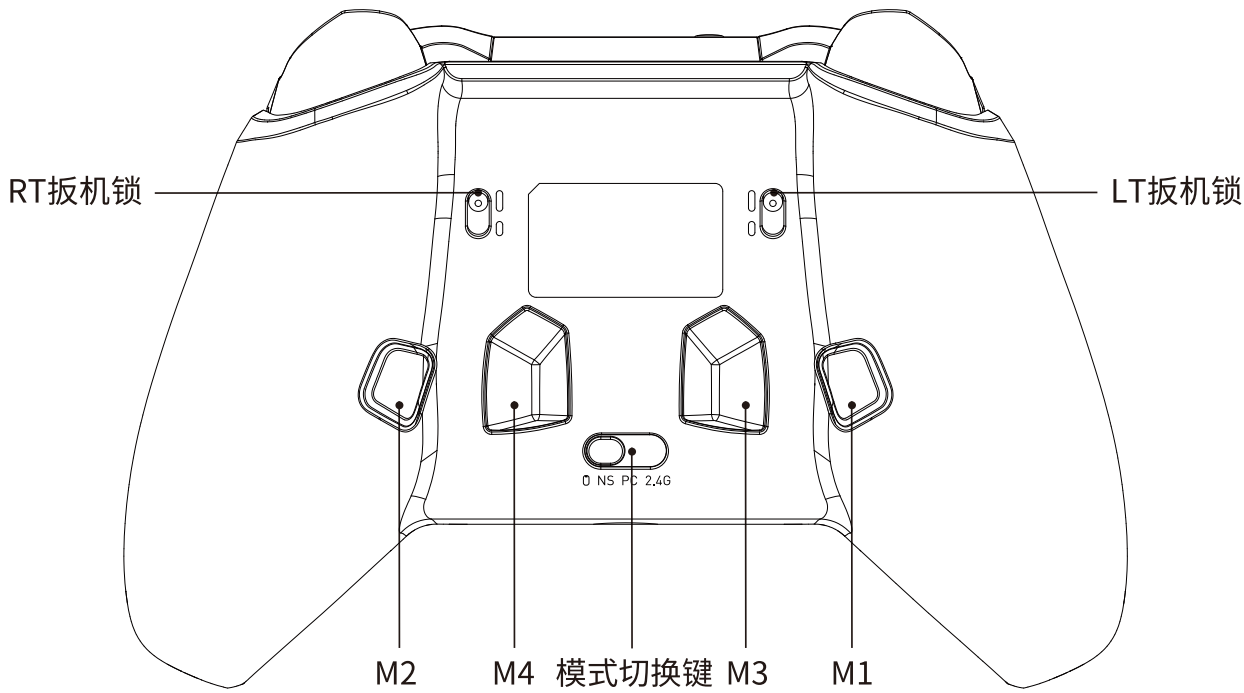
RT扳机锁
LT扳机锁
0 NS PC 2.4G
M2
M4
模式切换键
M3
M1

基本连接说明

产品拥有一键唤醒功能,在连接之前请先选择对应的设备模式

接收器模式——设备名称：根据连接的设备自动匹配；
PC模式——设备的名称:Xbox Wireless Controller;
NS模式--设备的名称:Pro Controller;
手机模式--设备的名称: G6V2_Touch

无线连接: 模式切换至对应档位之后，长按配对键直到指示灯快闪，则手柄进入配对状态，连接以上对应的设备名称即可。

有线连接: 模式切换至对应档位之后，通过附赠的数据线直接连接设备和手柄，即可使用。

手柄休眠/回连: 无线连接使用（蓝牙/接收器模式），10分钟不操作手柄会自动关机休眠；下次连接设备，通过短按HOME键可唤醒手柄，并自动回连设备。

手柄关机:无线连接使用（蓝牙/接收器模式），长按HOME键5s以上手柄关机。

电量说明

手柄电量显示

手柄电源状态	状态指示灯
• 20%——100%电量	• 冰蓝指示灯常亮
• 10%——20%电量	• 红色指示灯常亮
• 低于10%电量	• 红色指示灯闪烁

充电指示	状态指示灯
• 0-20%充电	• 红色指示灯慢呼吸
• 20%-100%充电	• 冰蓝色指示灯慢呼吸
• 满电	• 冰蓝色指示灯常亮

注意！请勿用超过5V⎓1A的电源给手柄充电，以免造成机器损坏。

注：在配对及部分功能调整时，通道指示灯会临时用作功能指示，约3秒后返回电量显示功能。有线连接使用时，通道指示灯显示实时充电状态；无线连接使用时，通道指示灯显示实时电量状态。

功能组合键操作指南

功能	组合键	指示灯/备注
灯光亮度调节	[FN]+十字键[←]	/
灯光模式调节	[FN]+十字键[→]	/
震动强度调节	[FN]+十字键[↑]/[↓]	/
截图	单击[FN]	仅连接Switch主机有效
摇杆中心死区切换	[L3]+[R3]同时下压5s	切换成功震动提示
体感映射	[FN]+[L3]开启/关闭映射左摇杆 [FN]+[R3]开启/关闭映射右摇杆	切换成功震动提示
手柄模式切换 （循环切换Xinput/Dinput/Switch模式）	[BACK]键+[START]键长按3s	仅2.4G连接支持
摇杆方圆调节	左摇杆：[FN]+左摇杆[↑]/[↓] 右摇杆：[FN]+右摇杆[↑]/[↓]	左摇杆： 装饰灯从左往右指示 右摇杆： 装饰灯从右往左指示

***使用组合键时，请务必按照上述的按键顺序进行操作，否则会出现无法切换的问题**

拓展功能

编程键宏定义

- 手柄操作：

1、在手柄已连接状态下，同时按下FN键+M1/M2/M3/M4键此时装饰灯条持续闪烁，表示已进入录制状态,若未闪烁请重复此操作。

2、依次录入需要设置的功能键

3、设置完成后短按对应宏键（M1/M2/M3/M4），手柄的装饰灯条停止闪烁并恢复至之前的模式，表示完成设置。

注：清除M1当前宏定义操作：手柄工作状态下，同时按FN+M1，装饰灯带持续闪烁，然后再按一下M1键，装饰灯带停止闪烁，则清除当前自定义功能。其他宏键清除步骤同理。

TURBO功能

支持TURBO的按键：A/B/X/Y/LB/LT/RB/RT；

手动TURBO功能：按TURBO+A键可开启A键的手动TURBO功能，需要手动按住A,才会触发；

自动TURBO功能：开启手动TURBO功能之后，再次按TURBO+A键；

关闭TURBO功能：开启自动TURBO功能之后，再次按TURBO+A键，则为关闭连发功能。

更多自定义功能可在Keylinker中进行设置

APP下载——安卓/鸿蒙/iOS

- 在机械师官网中下载APP, 以及相关更新的固件。
  地址：https://machenike.com/shoubing/download
- 使用浏览器扫描右侧二维码进入下载界面；
- 鸿蒙系统请下载安卓版本即可。

鸿蒙5.0及以上不支持Keylinker

连接步骤

1、在手机正确安装Keylinker软件后，首次启动时，弹出的相关权限申请需按提示确认；
2、任意模式启动手柄，可在Keylinker软件主页中搜到“G6V2_APP”
3、单击“G6V2_APP”连接并进入自定义界面；

注：*此功能无需手柄蓝牙连接手机，按上述操作打开Keylinker即可更改手柄设置。

重置手柄

当手柄在操作过程中或接入时，出现无响应或无法识别工作模式时，可以将手柄的USB连接线拔出并重新连接,亦可使用手动模式选择进入相应的工作模式。如果问题仍不能解决,请长按[HOME]键10秒或检查操作系统和设备与本手柄的兼容性问题,若仍然无法解决,请联系经销商客服。

版权等信息

XBOX/Windows 是美国微软公司 (Mirosoft Corporation) 的注册商标。
Android 是 Google Inc. 的商标。
Nintendo Switch 是任天堂株式会社便携式游戏机的注册商标。
出现在本文档中的其他系统名和产品名通常是各开发商公司的注册商标或商标。 请注意，本文档中没有出现 ™ 标志和 ® 标志。

当产品固件有更新时，请自行咨询客服或前往品牌官网查看，诉不另行通知。

机械师官网：https://www.machenike.com

规格

综合

项目	参考值
执行标准	Q/0212LSKJ0910-2019
输入电源	5.0V ⎓500mA
电池容量	3.7V /1200 mAh
使用距离范围	⩽ 10M

电池警告语

⚠ 注意

禁止拆解、撞击、挤压或投入火中。
若出现严重鼓胀、切勿继续使用。
切勿置于高温环境中。
浸水后禁止使用。
如果电池更换不当会有爆炸危险
只能用同样类型或等效类型的电池来更换

--用错误型号的电池组替换，可能会使安全防护失效(例如，对某些类型的钾电池组)；
--将电池组投入火中或加热炉中，或对电池组进行机械挤压或切割的处理可能导致爆炸；
--将电池组放置在极高温度环境中，可能导致爆炸或泄漏可燃液体或气体；
--电池组承受极低气压，可能导致爆炸或泄漏可燃液体或气体；
--非专业人员请勿拆解或维修此产品，否则有可能造成产品进一步的损坏或人身伤害！

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, a -nd (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible fo -r compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a C -lass B digital device, pursuant to part 15 of the FCC Rules. These limits are desig -ned to provide reasonable protection against harmful interference in a residenti -al installation. This equipment generates uses and can radiate radio frequency e -nergy and, if not installed and used in accordance with the instructions, may cau -se harmful interference to radio communications. However, there is no guarante -e that interference will not occur in a particular installation. If this equipment do -es cause harmful interference to radio or television reception, which can be dete -rmined by turning the equipment off and on, the user is encouraged to try to cor -rect the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement.The device can be used in portable exposure condition with -out restriction.

《废弃电器电子产品回收处理管理条例》

MACHENIKE倡导环保和低碳的消费体验，建议拥有该产品的用户在不需要此产品时，应遵守国家废弃电器电子产品回收处理相关法律法规，将其交给当地具有国家认可的回收处理资质的厂商进行回收处理，降低资源浪费，保护地球自然环境。

产品中有害物质的名称及含有信息表

部件名称		印刷电路板组件	外壳及附件	马达组件	电池组件
有害物质	铅（Pb）	×	○	×	×
	汞（Hg）	○	○	○	○
	镉（Cd）	○	○	○	○
	六价铬（Cr(Ⅵ)）	○	○	○	○
	多溴联苯（PBB）	○	○	○	○
	多溴二苯醚（PBDE）	○	○	○	○
	邻苯二甲酸二（2- 乙基）己酯（DEHP）	○	○	○	○
	邻苯二甲酸丁基苄酯（BBP）	○	○	○	○
	邻苯二甲酸二正丁酯（DBP）	○	○	○	○
	邻苯二甲酸二异丁酯（DIBP）	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

注 1：

○：表示该有害物质在该部件所有均质材料中的含量均满足电器电子产品有害物质限制使用国家标准要求。

×：表示该有害物质至少在该部件的某一均质材料中的含量不满足电器电子产品有害物质限制使用国家标准要求。

注 2：以上未列出的部件，表明其有害物质含量均满足电器电子产品有害物质限制使用国家标准要求。

表中标记“×”的部件，皆因全球技术发展水平限制而无法实现有害物质的替代。



该电子电气产品含有某些有害物质，在环保使用期限内可以放心使用，超过环保使用期限之后则应该进入回收循环系统。

MACHENIKE产品保修承诺

1、在用户按本技术使用说明书正确使用该产品的前提下，本产品自购买之日起一年内免费保修。保修服务方式为返厂维修，报修方式请扫产品包装盒上售后二维码进行报修。

2、我方因下列使用者个人的原因而造成的故障将不提供免费保修服务。如:

（1）擅自拆装、改装该产品而造成的故障;

（2）在使用、搬运的过程中不慎摔打、跌落、进液、供电规格不符而造成的故障;

（3）因缺乏合理的保养而造成的故障;

（4）没有按使用说明书正确指示进行操作;

（5）第三方厂品、服务或行为导致的故障或损坏等等。

3、在要求提供免费保修服务时，您必须提供清晰、完整和准确的销售发票和保修卡，购买产品时，可要求销售商提供上述上述销售发票和保修卡。

4、保修范围外的维修服务，将按规定收费。

保修卡

尊敬的用户:

感谢您选购本公司产品,我公司将按照《中华人民共和国消费者权益保护法》和国家技术监督局、国家工商行政管理局、财政局关于《部分商品修理更换退货责任规定》的有关规定，为您提供保修服务，请认真填写此卡并妥善保管，以便日后凭此卡维修。

客户姓名:_____电子邮件:_____

联系电话:_____邮政编码:_____

通信地址:_____

产品名称:_____ 产品型号:_____

购机日期:_____

购机渠道:_____

机身编号:_____

产品性能故障表

送修日期	性能故障描述	工程师签字	完成日期

备注：

1、请妥善保管此卡，保修时需出示此卡及购买凭证。
2、产品自购买之日起，凭购买凭证整机免费保修1年。
3、下列情况不属于免费服务范围，但可实行收费维修、终身服务；
1）不能出示保修说明及发票;
2）发票涂改；
3）意外因素或使用不当造成损坏;
4）未经我司许可，自行修理造成的损坏;
5）超过三包有效期，经修复仍可继续使用;

合格证

QUALIFIED CERTIFICATE



检验

MACHENIKE CERTIFIED